RCA

Universal

Remote Control

RCU4GLW

NITEglo™

LIGHTS UP for NIGHT USE

This Universal Remote Control is compatible with most models of infrared controlled Televisions, VCRs and Cable Boxes manufactured after 1989. Please retain this guide for future reference.

TABLE OF CONTENTS

Button Description.....2–3
Battery Installation.....3
Programming Your Universal Remote
TV.....4
TV Codes.....4–5
VCR.....6
VCR Codes.....6–7
Cable Box.....8
Cable Box Codes.....9
AUX.....10
Code Search.....11
Code Retrieval.....11
Sleep Feature.....12
NiteGlo Feature.....12
Trouble Shooting.....13
Helpline.....13
Additional Accessories.....14
Warranty.....Inside Card

NiteGlo is a trademark of Thomson Consumer Electronics

1J1146-Z Rev 12.96

Button Description

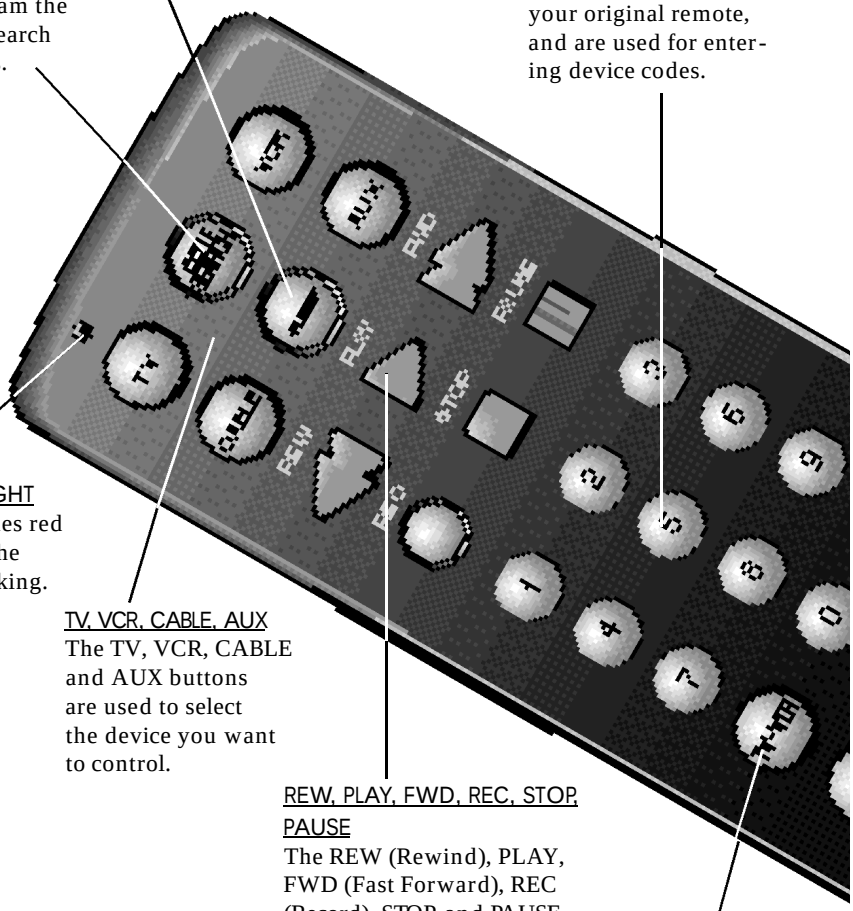

SLEEP
The SLEEP button allows you to set a time to turn off the TV automatically.

0-9
The number buttons operate the same as on your original remote, and are used for entering device codes.

CODE SEARCH
Used to program the remote or to search through codes.

INDICATOR LIGHT
The light flashes red to show that the remote is working.

TV, VCR, CABLE, AUX
The TV, VCR, CABLE and AUX buttons are used to select the device you want to control.

REW, PLAY, FWD, REC, STOP, PAUSE
The REW (Rewind), PLAY, FWD (Fast Forward), REC (Record), STOP, and PAUSE buttons operate the same as on your original VCR or remote. **You must press the REC button twice to begin recording.**

TV•VCR
The TV•VCR button operates the TV•VCR function of your VCR.

Button Description

ENTER
The ENTER button operates the same as on your original remote.

PRE CH
The PRE CH (Previous Channel) button operates the same as on your original remote.

VOL & CHAN
The VOL(Volume) and CHAN (Channel) buttons operate the same as on your original remote.

Battery Installation

Your remote requires four (4) new AAAalkaline batteries. To install the batteries:

1. Turn the remote over and push down on the arrow and slide the cover off.
2. Insert the batteries, matching the battery to the + and - marks inside the battery case.
3. Press the battery cover back into place.

Note: Removing the batteries may require you to reprogram the unit.

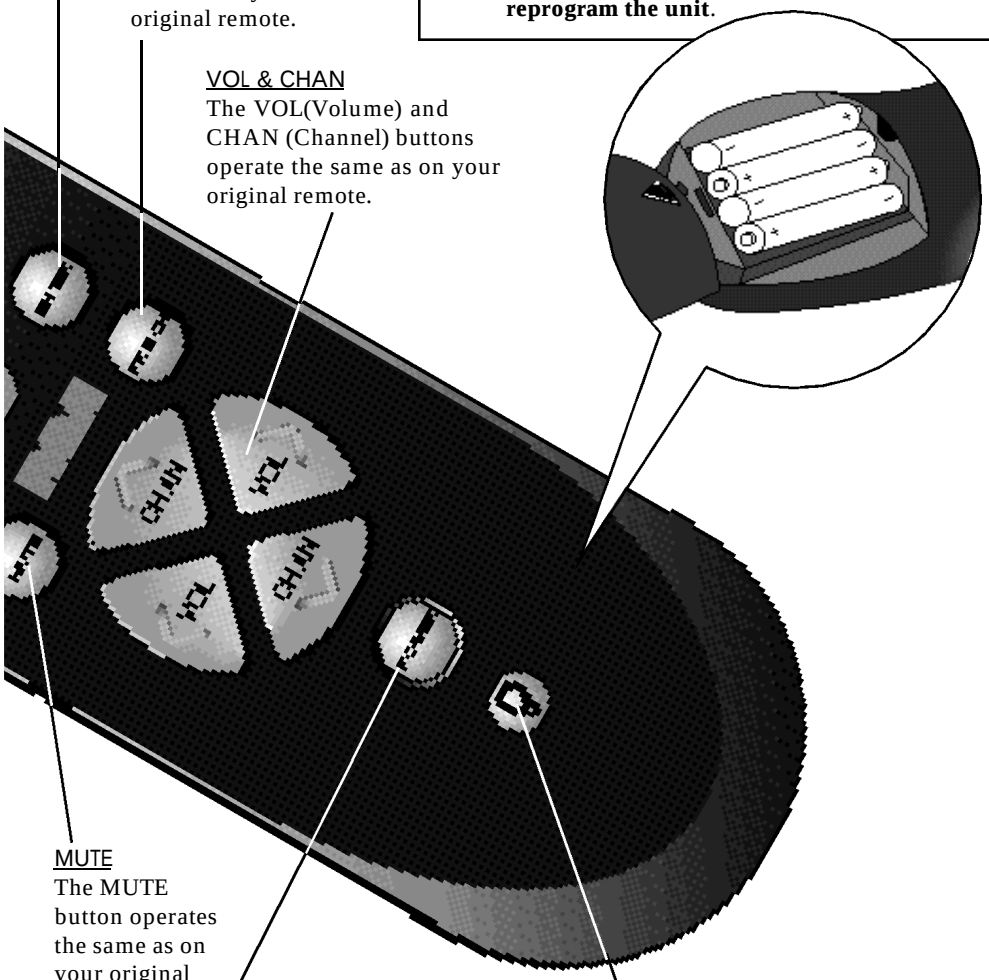

MUTE
The MUTE button operates the same as on your original remote.

POWER
The POWER button operates the same as your original remote (note: some RCA, GE and Proscan models require you to press the device key to turn the device on and the power key to turn the device off).

LIGHTBULB
The LIGHTBULB button is used to control lighting the keypad and conserving battery power. Press the button and hold until the remote lights up. The remote will then light at the touch of any button. To turn off the feature, press the LIGHTBULB button a second time.

Programming Your Universal Remote For TV

1. Manually turn on the TV.

2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.

3. Press and release the **TV** button (the **INDICATOR LIGHT** will blink then remain lit).

4. Find the three digit code for your TV in the code list starting below and enter it using the Number Buttons.

   After your code is entered, the **INDICATOR LIGHT** will turn off.

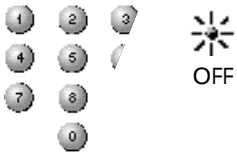

5. Aim the remote at your TV and press the **POWER** button. Your TV should turn off.

Note: If your TV does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 11.

6. With your TV on, press **CHANNEL UP**. If the TV responds, no further programming is required.

7. Enter your code here for easy reference.

TV CODE

TV Code List

Abex.....172
Admiral.....001, 173
Adventura.....174
Aiko 016
Alleron.....046
Amtron 038
Akai 002
Anam National.....003, 038
AOC.....004, 005, 006
007, 175, 176
Audiovox 038
Belcor.....004
Bell & Howell.....001, 083, 162
Bradford 038
Brokwood 004
Candle.....004, 006, 008, 174
Capehart 175
Celebrity 002
Centurion 009
Citizen.....004, 006, 008, 016, 038
105, 171, 174, 177
Clairtone 176
Colortyme.....004, 006, 010
Concerto 004, 006
Contec/Cony 011, 012
013, 014, 038, 176
Craig 038
Crown 038, 171
Curtis Mathes.....000, 004, 006, 015
105, 162, 171
CXC 038
Daewoo.....004, 005, 006, 016, 017
018, 126, 127, 171
Daytron.....004, 006, 171
Dimensia.....000
Dumont.....004, 151
Dynatech.....178
Electroband.....002, 176
Electrohome 003, 004, 006
019, 020, 021, 022
Emerson 004, 006, 012, 014, 023, 024
025, 026, 027, 028, 029, 030
031, 032, 033, 034, 035, 036
037, 038, 039, 040, 041, 042
043, 044, 045, 046, 047, 123
124, 162, 163, 171, 176, 177, 179
Envision.....004, 006
Fisher.....048, 049, 050, 051, 162, 180
Fujitsu 046
Funai 038, 046
Futuretec 038
GE 000, 003, 004, 006
022, 052, 053, 054
055, 087, 163, 164
165, 166, 167, 168, 181
Gibralter 004, 151

TV Code List Continued

Goldstar 004, 005, 006, 012, 019, 056
057, 058, 155, 156, 171, 172
Grundy 038, 046, 171
Hallmark.....004, 006
Harvard 038
Hitachi.....004, 006, 011, 012, 013, 053
059, 060, 061, 135, 136, 137
138, 139, 140, 141, 142, 143
144, 145, 146, 147, 148, 150, 179
IMA 038
Infinity.....062
Janeil 174
JBL 062
JCB 002
JC Penny.....000, 004, 005, 006, 008, 022
052, 054, 058, 063, 064, 072
087, 105, 128, 171, 172, 181
Jensen.....004, 006
JVC.....011, 012, 013, 054, 060, 065, 066
067, 089, 157, 158, 159, 182
Kawasho 002, 004, 006
Kaypani.....175
Kenwood.....004, 006, 019, 020
Kloss Novabeam 068, 069, 174, 183
KTV 038, 070, 171, 176, 177
Loewe 062
Logik 083
Luxman.....004, 006
LXI.....000, 006, 049, 062, 071, 072
073, 162, 181
Megatron.....006, 059
Magnavox.....004, 006, 008, 019, 062, 068
069, 074, 075, 076, 077, 088
089, 130, 131, 132, 133, 134, 183, 184
Majestic 083
Marants 062
Marantz.....004, 006, 062, 078
MEI.....176
Memorex.....001, 006, 082, 083, 162
MGA 004, 005, 006, 019, 020, 021
022, 051, 079, 080, 082
Midland 054, 151, 171, 172, 181
Minutz.....052
Mitsubishi.....004, 005, 006, 019, 020
021, 022, 051, 079, 080
081, 082, 082, 125
Montgomery Ward 083
Motorola 003, 173
MTC.....004, 005, 006, 105, 176, 178
Multitech.....038, 178
Multivision 084
NAD 006, 071, 072, 185
NEC.....003, 004, 005, 006, 020, 085, 089
Nikko.....006, 016
NTC 016
Onwa.....038
Optimus.....185
Optonica 095, 173
Orion 035
Panasonic 003, 054, 062, 170
Philco.....003, 004, 005, 006, 008
012, 019, 062, 068, 069
074, 075, 077, 183, 184
Philips.....003, 004, 008, 012, 019, 046
047, 062, 068, 069, 074, 075
076, 086, 087, 088, 089
Pilot 004, 171
Pioneer 004, 006, 090, 091, 092, 179, 185
Portland 004, 005, 006, 016, 171
Price Club 105
Prism 054
ProScan 000, 181
Proton 004, 006, 012, 093, 186, 175
Pulsar.....151
Pulser.....004
Quasar.....003, 054, 070, 094
Radio Shack 000, 004, 006, 011, 012
038, 049, 095, 162, 171, 172
Realistic.....000, 004, 006, 011, 012
038, 049, 095, 162, 171, 172
RCA.....000, 003, 004, 005, 006, 007
019, 096, 098, 099, 100, 101
102, 103, 129, 179, 181, 187, 188
Rhapsody 176
Runco.....151
Sampo 004, 006, 171, 172, 175
Samsung 004, 005, 006, 011, 012
015, 019, 020, 104, 105
106, 171, 172
Samsux 171
Sanyo.....004, 048, 049, 050, 080, 107
108, 162, 169, 180
Scotch.....006
Scott.....004, 006, 012, 024, 035, 038, 046
Sears 000, 004, 006, 013, 019, 020
046, 048, 049, 050, 051, 066, 071
072, 109, 110, 162, 180, 181, 189
Sharp 004, 006, 012, 029, 095, 111
112, 113, 114, 122, 171, 173
Shogun.....004
Signature 001, 083, 115
Simpson.....008
Sonic.....176
Sony.....002
Soundesign.....004, 006, 008, 038, 046
Squareview.....189
SSS 004, 038
Starlite 038
Supre-Macy.....174
Supreme 002
Sylvania 004, 006, 008, 019, 062, 068
069, 074, 075, 076, 077, 088
116, 161, 183, 184
Symphonic 033, 038, 189
Tandy.....173
Tatung 003, 178
Technics.....054
Techwood 004, 006, 054
Teknika 004, 005, 006, 008, 012
013, 016, 038, 046, 076, 082
083, 105, 170, 171
Telecaption 117
Tera.....186
TMK.....004, 006
Toshiba 049, 071, 072, 089, 105
109, 117, 118, 160, 162
Totevision 171
Universal.....052, 053, 087
Victor.....066, 182
Vidtech 004, 005, 006
Viking 174
Wards 000, 001, 004, 005, 006, 019
024, 033, 046, 052, 053, 062
068, 069, 074, 075, 076, 083
087, 088, 095, 119, 120, 184
Yamaha 004, 005, 006, 019, 020
Zenith 083, 121, 151, 152, 153, 154

Programming Your Universal Remote For VCR

1. Manually turn on the VCR.

2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.

3. Press and release the **VCR** button (the **INDICATOR LIGHT** will blink then remain lit).

4. Find the three digit code for your VCR in the code list starting below and enter it using the Number Buttons.

   After your code is entered, the **INDICATOR LIGHT** will turn off.

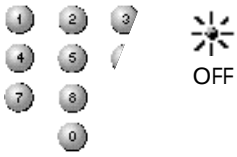

5. Aim the remote at your VCR and press the **POWER** button. Your VCR should turn off.

Note: If your VCR does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 11.

6. With your VCR on, press **CHANNEL UP**. If the VCR responds, no further programming is required.

7. Enter your code here for easy reference.

VCR CODE

VCR Code List

Admiral.....001
Adventura.....026
Aiko 027
Aiwa 002, 026
Akai.....003, 004, 005, 006, 007
008, 111, 112, 113
American High.....021
Asha.....013
Audio Dynamics 009, 010
Audiovox 014
Bell & Howell.....011
Beaumark 013
Broksonic.....012, 025
Calix.....014
Candle.....013, 014, 015, 016
017, 018, 019
Canon.....021, 022, 114
Capehart 020, 110
Carver 062
CCE 027, 061
Citizen.....013, 014, 015, 016
017, 018, 019, 027
Colortyme.....009
Colt.....061
Craig 013, 014, 023, 061
Curtis-Mathes 000, 002, 009, 013, 016
018, 021, 022, 024, 115
Cybernex.....013
Daewoo.....015, 017, 019, 025
026, 027, 028, 110
Daytron 110
DBX 009, 010
Dimensia.....000
Dynatech.....002, 026
Electrohome 014, 029
Electrophonic 014
Emerson 002, 006, 012, 014, 015
021, 024, 025, 026, 029, 030
031, 032, 033, 034, 035, 036
037, 038, 039, 040, 041, 042
043, 044, 045, 046, 047, 065
105, 113, 116, 117
Fisher.....011, 023, 048, 049
050, 051, 052, 118
Fuji 021, 119
Funai 002, 026
Garrard 026

VCR Code List Continued

GE 000, 013, 021, 022
053, 115, 120
Goldstar 009, 014, 018, 054, 121
Gradiente 026
Harley Davidson 026
Harman Kardon.....009, 068
Harwood.....061
Headquarter 011
Hitachi.....002, 055, 056, 057
107, 111, 120, 122
HI-Q.....023
Instant Replay 021
JCL 021
JC Penney 009, 010, 011, 013, 014
021, 022, 055, 056, 058
059, 060, 107, 118
Jensen.....111
JVC.....009, 010, 011, 018, 058, 111, 123
Kenwood.....009, 010, 011, 016
018, 058, 111, 123
KLH 061
Kodak 014, 021
Lloyd 002, 026
Logik 061
LXI 014
Magnavox.....021, 022, 062, 063
104, 108, 124
Magnin 013
Marantz.....009, 010, 011, 016, 018
021, 058, 062, 064
Marta 014
Masushita 021
MEI.....021
Memorex.....001, 002, 011, 013, 014
021, 023, 026, 104
MGA 029, 065, 113
MGN Technology.....013
Midland.....053
Minolta 055, 056, 107
Mitsubishi.....029, 055, 056, 065, 066
067, 068, 069, 070, 071
072, 073, 074, 106, 113, 123
Montgomery Ward 001, 075
Motorola 001, 021
MTC.....002, 013, 026
Multitech.....002, 013, 026, 053, 061
NEC.....009, 010, 011, 016, 018
058, 064, 076, 077, 078
079, 111, 123
Nikko.....014
Noblex.....013
Olympus 021
Optimus 001, 014
Optonica 096
Panasonic 021, 022, 109, 125, 126, 127
Pentax 016, 055, 056, 016, 107, 120
Pentex research.....018
Philco.....021, 022, 062, 063
Philips 021, 062, 096, 124
Pilot 014
Pioneer 010, 055, 080, 081, 123
Portland.....016, 017, 019, 110
ProScan 000
Protec.....061
Pulsar.....104
Quarter 011
Quartz 011
Quasar.....021, 022, 125

RCA.....000, 003, 013, 021, 055, 056, 082
083, 084, 085, 086, 087, 088, 089
090, 091, 107, 115, 120, 125
Radio Shack 001, 002, 011, 013, 014, 021
022, 023, 026, 029, 049, 050, 096
Realistic.....001, 002, 011, 013, 014, 021
022, 023, 026, 029, 049, 050, 096
Radix 014
Randex.....014
Ricoh 128
Runco.....104
Samsung 005, 013, 015, 033, 053, 112
Sanky.....001, 104
Sansui.....010, 092, 111, 123
Sanyo.....011, 013, 023
Scott.....012, 015, 025, 032, 038
065, 093, 116
Sears.....011, 014, 021, 023, 048, 049
050, 051, 055, 056, 107, 118
Sharp.....001, 002, 017, 029, 094, 095, 096
Shintom.....004, 056, 061, 098
Shogun.....013
Signature 002
Singer.....021, 061
Sony.....004, 098, 099, 119, 128
STS 021, 107
Sylvania.....002, 021, 022, 026
062, 063, 065, 124
Symphonic 002, 026
Tandy.....002, 011
Tashiko.....014
Tatung 058, 111
Teac 002, 026, 058, 085, 111
Technics.....021, 109
Teknika 002, 014, 021, 100, 129, 026
Toshiba 015, 049, 051, 055
065, 093, 116
Totevsion.....013, 014
TMK.....013, 024, 047
Unitech 013
Vector Research 009, 010, 015, 016
Victor 010
Video Concepts 009, 010, 015, 016, 113
Videosonic.....013
Wards 001, 002, 013, 014, 015, 021
023, 026, 029, 055, 056, 061
096, 101, 102, 103, 107, 116
XR-1000.....021, 026, 061
Yamaha 009, 010, 011, 018, 058, 111
Zenith 004, 098, 104, 119, 128

Programming Your Universal Remote For Cable Box

1. Manually turn on the Cable Box.

2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.

3. Press and release the **CABLE** button (the **INDICATOR LIGHT** will blink then remain lit).

4. Find the three digit code for your Cable Box in the code list starting on the following page and enter it using the Number Buttons.

   After your code is entered, the **INDICATOR LIGHT** will turn off.

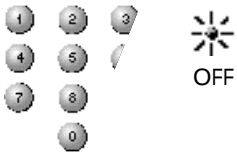

5. Aim the remote at your Cable Box and press the **POWER** button. Your Cable Box should turn off.

Note: If your Cable Box does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 11.

6. With your Cable Box on, press **CHANNEL UP**. If the Cable Box responds, no further programming is required.

7. Enter your code here for easy reference.

CABLE BOX CODE

Cable Box Code List

ABC.....001, 002, 003, 004
005, 006, 007
Antronix 008, 009
Archer.....008, 009, 010, 011
Cabletenna 008
Cableview.....008
Century.....011
Citizen.....011
Colour Voice.....012, 013
Comtronics.....014, 015
Contec.....016
Eastern 017
Garrard 011
GC Electronics.....009
Gemini.....018, 019
General Instrument.....003
Hamlin 020, 021, 022, 035
Hitachi.....003
Hytex.....002
Jasco.....011
Jerrold.....001, 003, 005, 007
018, 023, 024
Magnavox.....025
Memorex.....026
Movie Time 002, 027
NSC.....002, 027
OAK 002, 016, 029
Panasonic 000, 048
Paragon.....026
Philips.....011, 012, 013, 019, 025
030, 031, 032
Pioneer 033, 034
Pulsar 026
RCA.....000, 047
Realistic.....009
Regal 022, 035
Regency.....017
Rembrandt 003
Runco 026
Samsung.....014, 034
Scientific Atlanta.....006, 036, 037, 038
Signal.....014, 018
Signature.....003
SLMarx.....014
Sprucer 000
Standard Components 039
Starcom.....001, 007, 018
Stargate.....014, 018
Starquest.....018
Tandy.....040
Teleview 014
Texscan 039
Tocom 004, 023, 041
Toshiba 026
TUSA.....018
TV86 027
Unika.....008, 009, 011
United Artists.....002
United Cable 001
Universal 008, 009, 010, 011, 042
Videoway 044
Viewstar 015, 025, 027, 040
Zenith 026

The AUX Button

The AUX Button allows you to assign another TV, VCR or Cable Box to be controlled.

1. Manually turn on the the device you wish to assign to the AUX button (TV, VCR or Cable Box).

2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.

3. Press and release the **AUX** button.
   The **INDICATOR LIGHT** will blink.

4. Press **TV, VCR** or **CAB** (depending on which device you wish to program). The **INDICATOR LIGHT** will blink again then remain lit.

5. Find the three digit code for the device you wish to program in the code list

Device	Page
TV	4-5
VCR	6-7
Cable Box	9

   Enter the code using the **Number Buttons**.

   After your code is entered, the **INDICATOR LIGHT** will turn off.

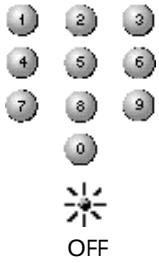

6. Aim the remote at your device and press the **POWER** button. Your device should turn off.

Note: If your device does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 11.

7. With your device on, press **CHANNEL UP**. If the device responds, no further programming is required.

8. Enter your code here for easy reference.

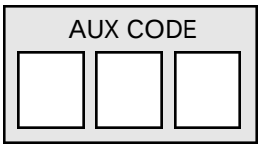

Programming With Code Search

If your TV, VCR, or Cable Box does not respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following the steps below.

1. Turn on the device you wish to program.

2. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH.**

3. Press and release the device button for the device you are programming (**TV, VCR** or **CABLE**). The **INDICATOR LIGHT** will blink once.

For AUX, press **AUX** then the device button you are assigning to AUX.

4. Press and release **POWER** until your device turns off.

Important: You may have to press **POWER** up to 200 times.

5. When your device turns off, press the **ENTER** button, the **INDICATOR LIGHT** will turn off.

Getting Codes From Your Universal Remote

If you need to find the three-digit code for your TV, VCR or Cable Box after your device is set-up using Code Search, use this procedure.

1. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH.**

2. Press and release the device button for the device's code you are retrieving (**TV, VCR** or **CABLE**). The **INDICATOR LIGHT** will blink once.

For AUX, press **AUX** then the device button for the code you are retrieving.

3. Press and release **CODE SEARCH**. The **INDICATOR LIGHT** will turn off.

4. Starting with **0** on the keypad press the number buttons in order (**0-9**) until the **INDICATOR LIGHT** blinks.



5. The number which causes the **INDICATOR LIGHT** to blink is the first digit of your code.

6. Repeat step 4 until you have retrieved all three numbers in the code.

Sleep Feature

This feature will turn off your TV at the time you choose from 1 to 99 minutes.

To Program Sleep Feature:

1. Press and hold the **SLEEP** button.
   INDICATOR LIGHT will stay lit.

   Release the **SLEEP** button.

2. Enter time in minutes using the numerical key pad. (Minutes 1 thru 9: press **0** before the actual number - maximum: 99 minutes).

3. Leave remote aimed at television. (Sleep Feature will not work unless remote is left aimed at television.)

To Turn Off The Sleep Timer:

Sleep timer program will be cancelled and the clock reset to zero by either of the following:

Press and hold **SLEEP** button until **INDICATOR LIGHT** blinks or press **POWER** button, turning TV OFF.

Niteglo Feature

The Lightbulb button is used to control lighting the keypad.

Press the LIGHTBULB button and hold until the remote lights up.

The entire keypad will light and go off after 5 seconds.

Every time a button is pressed the Keypad will light, and remain lit until the command is completed.

Do not press the lightbulb unless you want to completely deactivate the keypad light.

To deactivate the Keypad light press the LIGHTBULB button.

To save battery power, do not activate the NiteGlo feature when remote is used in well lit rooms.

Trouble Shooting

PROBLEM	SOLUTION
Red light not blinking when you press any key	A)Replace the batteries (with fresh, new AAAAlkaline batteries). B) Check that batteries are properly installed.
The RCU4GLW does not operate your devices	A) Try all the codes listed for your brand. B) Try the Code Search method (page 11).
Not performing commands properly	Start Code Search over again to locate the proper code for full compatibility.
Problems programming a TV/VCR Combo Unit	Try the VCR code for your brand. Some combo units, however, may require both a TV and a VCR code for full operation.
VCR not recording	As a safety feature on your remote, you must press the REC button twice.
Channel up and down do not function on an RCATV	Due to some designs, the original remote will only perform these functions.
Problems changing channels	If your original remote required ENTER after a channel, press ENTER after you select a channel.
No response after pressing a key	A) Make sure you have new batteries, and you are aiming your remote at your devices. B) Check that batteries are properly installed. See page 3.
Sleep feature does not work	Remote must remain aimed at television after SLEEP is set in order for it to work.

Reprogramming may be required after batteries are removed.

RCU4GLW Help Line

If you need additional set-up help, please call the RCU4GLW Helpline at:
1-800-316-8756

RCA Accessories

The following RCA accessories are available through your RCA dealer or by calling 1-800-338-0376.

ANT200 Amplified TV Antenna

To receive UHF or VHF stations or serve as a backup for cable outages, purchase the RCAANT200. Switching between your cable or satellite and your antenna is made easy with an integrated A/B switch. Hooks up to any TV and includes all necessary accessories.

Features include:

- Dipoles tilt and rotate for improved picture
- UHF Loop turn range of 345°
- Gold plated connectors for improved signal conductivity
- Manual Gain Control to Boost Signal
- Five-Year Limited Warranty
- Measures 8¾ H. X 8½ W. X 4⅛ D.

ANT200

$49.95†

ANT140 Amplified FM Antenna

This RCAAmplified FM Antenna features a high-signal, low-noise amplifier that boosts FM Stereo for better reception even in remote areas. The slim profile and compact design (less than 10" high) make it the perfect complement to bookshelf receiver systems.

Features include:

- Red LED Brightens as Gain is Increased
- Combination Power/Gain control
- Special No-Scuff Pad
- ULApproved AC Adapter
- Measures 9½ H. X 3¾ W. X 4 D.
- Hook-Up Accessories Included
- One-Year Limited Warranty

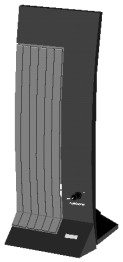

ANT140

$19.95†

D918 Surge Protector Plus

Guard your vulnerable home theatre equipment against potential damage from power surges or other electrical disturbances. Power surges can enter and destroy your valuable equipment from many sources - cable, phone lines, satellite dishes or electrical connections.

Features include:

- 3-Way Surge Protection
- 8 Outlets plus Coaxial, Phone & AC Line
- $10,000 Equipment Guarantee
- Lifetime Warranty

D918

$69.95†

RCU940 Remote Control Signal Sender

RCU940

The RCARemote Control Signal Sender allows you to control your Stereo, CD Player, Cable Box, Satellite Receiver, VCR or Laserdisc Player from anywhere in your home. It turns Infrared Signals (IR) into Radio Frequency (RF) to go through walls, floors, etc. Great for households with one VCR or Satellite Receiver to enable control of the unit from another room.*

Features include:

- Extends the range of your control up to 140ft.
- Each unit is only 4" tall
- Includes blaster that allows you to hide the unit in a cabinet
- One-Year Limited Warranty

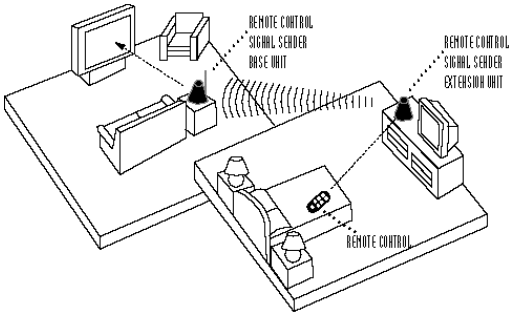

* Remote Control Signal Sender only extends the range of the remote control. Device must be connected by cable.

$59.95†

RCA Accessories

Description	Model #	Price	Qty.	Total
Amplified TV Antenna	ANT200	$49.95		
Amplified FM Antenna	ANT140	$19.95		
Digital Surge Protector Plus	D918	$69.95		
Remote Control Signal Sender	RCU940	$59.95		
Total Merchandise Order				
Sales Tax	We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent.			
Shipping and Handling				$5.00
Total Amount Due				

Prices are subject to change without notice.

ORDERING BY PHONE:

Have your Visa, MasterCard or Discover Card ready and call the toll-free number listed below. **This number should only be used to place orders for the above listed Accessories.**

1-800-338-0376

ORDERING BY MAIL:

Provide your name, address, phone number and a check or money order for the total amount due, and mail to:

RCA Accessories
PO Box 8419
Ronks, PA 17573

Include this completed form with your order.

†Shipping and handling will be added to all orders.

RCA

Universal

Remote

Back-Lit Keypad

NITEglo-LIGHT UP FEATURE:

Entire keypad lights for easy viewing in dimly lit rooms by simply pressing the lightbulb button. Great for changing channels or adjusting volume without turning on the room lights.

UNIQUE SHAPE:

Gives you 2 ways to hold remote and use.

Hold the end of the remote for TV operation.

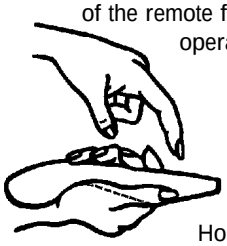

Hold the middle of the remote for VCR operation.

CODE SEARCH:

Makes set-up easy. Scans the entire code library to find the right code for your TV, VCR, or Cable Box.

TOLL-FREE HELPLINE:

A customer service representative is ready to answer your questions. See the instruction book for details.

Requires Four (4) AAA Batteries (Not Included)

30539: 079000305392
Ht: 0.867", Wid: 1.24865", BWR 1 mils
Magnification 85%
0 79000 30539 2

NITEglo LIGHTS UP for NIGHT USE

THIS NITEglo REMOTE CONTROL IS COMPATIBLE WITH MOST MODELS OF THE FOLLOWING BRANDS
(with infrared controlled components manufactured after 1989):

TV

Abex	Dimensia	Kloss Novabeam	Optonica	Signature
Admiral	Dumont	KTV	Orion	Simpson
Adventura	Dynatech	Loewe	Panasonic	Sonic
Aiko	Electroband	Logik	Philco	Sony
Alleron	Electrohome	Luxman	Philips	Soundesign
Amtron	Emerson	LXI	Pilot	Squareview
Akai	Envision	Megatron	Pioneer	SSS
Anam National	Fisher	Magnavox	Portland	Starlite
AOC	Fujitsu	Majestic	Price Club	Supre-Macy
Audiovox	Funai	Marants	Prism	Supreme
Belcor	Futuretec	Marantz	*ProScan	Sylvania
Bell & Howell	*GE	MEI	Proton	Symphonic
Bradford	Gibralter	Memorex	Pulsar	Tandy
Brokwood	Goldstar	MGA	Pulser	Tatung
Candle	Grundy	Midland	Quasar	Technics
Capehart	Hallmark	Minutz	Radio Shack/ Realistic	Techwood
Celebrity	Harvard	Mitsubishi		Teknika
Centurion	Hitachi	Montgomery Ward	*RCA	Telecaption
Citizen	IMA		Rhapsody	Tera
Clairtone	Infinity	Motorola	Runco	TMK
Colortyme	Janeil	MTC	Sampo	Toshiba
Concerto	JBL	Multitech	Samsung	Totevision
Contec/Cony	JCB	Multivision	Samsux	Universal
Craig	JC Penny	NAD	Sanyo	Victor
Crown	Jensen	NEC	Scotch	Vidtech
Curtis Mathes	JVC	Nikko	Scott	Viking
CXC	Kawasho	NTC	Sears	Ward
Daewoo	Kaypani	Onwa	Sharp	Yamaha
Daytron	Kenwood	Optimus	Shogun	Zenith

VCR

Admiral	Dimensia	Lloyd	Pentax	Shintom
Adventura	Dynatech	Logik	Pentex	Shogun
Aiko	Electrohome	LXI	Research	Signature
Aiwa	Electrophonic	Magnavox	Philco	Singer
Akai	Emerson	Magnin	Philips	Sony
American High	Fisher	Marantz	Pilot	STS
Asha	Fuji	Marta	Pioneer	Sylvania
Audio Dynamics	Funai	Masushita	Portland	Symphonic
	Garrard	MEI	*ProScan	Tandy
Audiovox	*GE	Memorex	Protec	Tashiko
Bell & Howell	Goldstar	MGA	Pulsar	Tatung
Beaumark	Gradiente	MGN	Quarter	Teac
Broksonic	Harley Davidson	Technology	Quartz	Technics
		Midland	Quasar	Teknika
Calix	Harman Kardon	Minolta	*RCA	Toshiba
Candle		Mitsubishi	Radioshack/ Realistic	Totevsion
Canon	Harwood	Montgomery Ward		TMK
Capehart	Headquarter		Radix	Unitech
Carver	Hitachi	Motorola	Randex	Vector Research
CCE	HI-Q	MTC	Ricoh	
Citizen	Instant Replay	Multitech	Runco	Victor
Colortyme	JCL	NEC	Samsung	Video Concepts
Colt	JC Penney	Nikko	Sanky	Videosonic
Craig	Jensen	Noblex	Sansui	Wards
Curtis-Mathes	JVC	Olympus	Sanyo	XR-1000
Cybernex	Kenwood	Optimus	Scott	Yamaha
Daewoo	KLH	Optonica	Sears	Zenith
Daytron	Kodak	Panasonic	Sharp	
DBX				

CABLE BOX

ABC	Gemini	Panasonic	Signal	Toshiba
Antronix	General Instrument	Paragon	Signature	Tusa
Archer		Philips	SI Marx	TV86
Cabletenna	Hamlin	Pioneer	Sprucer	Unika
Cableview	Hitachi	Pulsar	Standard Components	United Artists
Century	Hytex	*RCA		United Cable
Citizen	Jasco	Realistic	Starcom	Universal
Colour Voice	Jerrold	Regal	Stargate	Videoway
Comtronics	Magnavox	Regency	Starquest	Viewstar
Contec	Memorex	Rembrandt	Tandy	Zenith
Eastern	Movie Time	Runco	Teleview	
Garrard	NSC	Samsung	Texscan	
GC Electronics	Oak	Scientific Atlanta	Tocom	

***No Setup Required For Most Models**

Thomson Consumer Electronics, Inc.
Product Exchange Center
32 Spur Drive
El Paso, Texas 79906
1J1149-Z Rev 9.96

Trademark(s) ® Registered Marca(s) Registrada(s)
Made in China

RCU4GLW

RCA

First Class
Postage
Required

Thomson Consumer Electronics
2000 Clements Bridge Road
Deptford NJ. 08096-2011

Attn: Remote Control
Purchase Registration

RCU4GLW Product Registration Card

Please complete and return this Purchase Registration Card right away. This information will help us get to know and service our customers better.

1. ❑ Mr. ❑ Mrs. ❑ Ms. Name:_____
   Address:_____
   _____

2. Model: **RCU4GLW**

3. Date of Purchase/Receipt as Gift: _____ 4. Price: $ _____

5. Age of Purchaser/Gift Recipient:

   ❑ 16-25 ❑ 26-35 ❑ 36-45 ❑ 46-55 ❑ 56+

6. What specific need did the Universal Remote help you resolve?

   ❑ *A.* Replacing A Lost Remote ❑ *B.* Replacing A Broken Remote
   ❑ *C.* Consolidating Remotes ❑ *D.* Adding an Extra Remote

7. Where will this remote primarily be used?
   and with what brand? TV: _____
   VCR: _____ Cable Box: _____

   ❑ *A.* Kitchen ❑ *B.* Bedroom ❑ *C.* Family Room/Living Room
   ❑ *D.* Other _____

8. How did you become aware of this remote?

   ❑ *A.* Advertisement ❑ *B.* Salesperson ❑ *C.* Store Display
   ❑ *D.* Received as a Gift ❑ *E.* Friend or Relative _____
   ❑ *F.* Other_____

9. What other brands did you consider buying? ❑ *A.* None

   ❑ *B.* GE ❑ *C.* One For All ❑ *D.* Zenith
   ❑ *E.* Gemini ❑ *F.* Sony ❑ *G.* Other _____

10. What factors most influenced this purchase? (Check up to 3)

   ❑ *A.* Brand ❑ *B.* Features ❑ *C.* Recommendation
   ❑ *D.* Price ❑ *E.* Received as a Gift ❑ *F.* Other_____

What suggestions do you have to improve this product?

_____
_____
_____

Thank you for filling out this card. This information will help us better serve you and others who purchase RCAConsumer Electronics Products. We will not share your information with any other companies.

Warranty

Thomson Consumer Electronics warrants that for 90 days from date of purchase this product is free from defects in material and workmanship. If the item is defective within that period, return it at your expense to the dealer from whom it was purchased together with proof of purchase for replacement. This warranty excludes defects or damage due to misuse, abuse, or neglect. The foregoing representsThomson'ssole obligation underthis warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For purchases in outside the United States contact your dealer for warranty information

Help Line (US Only)
If you need additional set-up help, call our toll-free Help Line at 1-800-316-8756

©1996 Thomson Consumer Electronics, Inc.
Trademark(s)® Registered
Marca(s) Registrada(s)